

## DISPENSER INSTALLATION

Remove bottles by inserting the key into the bottom of the bottles. (There is one hole under each bottle.)

PUSH (do not twist) the key until you hear a click, then pull up on the top of the bottle and remove the sleeve and bottle. Do this for each bottle. Set bottles aside for re-installation later.

With the bottles now removed, flip the bracket over and install the two sided adhesive tape in the middle of the back area. (Press down to secure to dispenser bracket.)

**Note: Clean the mounting surface thoroughly before installing the bracket.**

Squeeze adhesive caulk (not included) onto the back of the dispenser on each side of the tape.

Remove backing from tape.


Press bracket onto the wall where you wish to mount the dispenser. (Tip: move the bracket around slightly while pressing the bracket against the wall to secure.)

Allow the bracket/adhesive to cure for 24-48 hours before reinstalling bottles.

## TO FILL/INSTALL BOTTLES

To unlock the top of each bottle, press the spout and turn counter clockwise. Fill with liquid and replace the cap.

Place the lock bracket over the spout of the bottle and slide down until you feel a click.

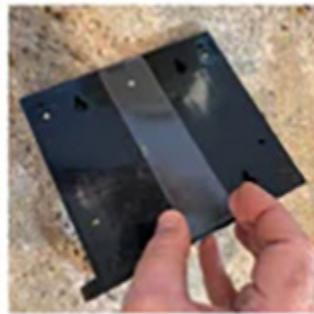

*Accent*  
AMENITIES

**Website:** [accentamenities.com](http://accentamenities.com)

**Phone:** 888-382-1340

**Email:** [info@accentamenities.com](mailto:info@accentamenities.com)